

Ultimate GL1500 Midrider seats

Installation procedure

ONLY QUALIFIED PEOPLE SHOULD PERFORM THIS INSTALLATION

PASSENGER BACKREST

1. Remove your stock passenger backrest; open the trunk and remove the two screws (Phillip head screwdriver) then close the trunk and pull the bottom of the backrest out one inch and lift the backrest straight up.
2. To install your new Ultimate passenger backrest, remove the two stainless steel screws from the mounting holes in the new backrest, with the trunk closed slide the backrest straight down making sure that the mounting hook bracket goes into the trunk cutouts correctly, now open the trunk and install the two supplied screws to hold the backrest in place (4mm Allan key), **do not over tighten these screws.**

MAIN SEAT

To make it easier for you to remove and install the seat it is recommended you remove the passenger backrest first and install it after the main seat is in place.

1. The grab handles on the side of the seat also hold the mounting bolts, remove the two bolts from each handle (6mm Allen key) keep these handles separate, LH side and RH side.
NOTE – if your grab handles have the built in bushings you will need to remove the bushings from the Ultimate seat bolt holes. (you won't need the bushings)
2. Lift the back of the seat about 2 inches and slide the seat back towards the trunk then lift up and off the frame of the bike.
Store your stock seat away.
3. To install your new seat you must be sure to have the front mounting tab on the seat go into the front receiver correctly and then sit down on the bikes frame correctly, the front of the seat must be flush with the tank and will not lift up and the bolt holes must line up.
4. Re install the 4 bolts into the handles and seat and tighten securely.

REMOVABLE RIDER BACKREST

If you have the Ultimate removable rider backrest you can install it now by lifting the Velcro tab on the seat and sliding the backrest post down into the backrest bracket inside the seat, you will see a groove in the backrest post, there is a spring-loaded plunger inside the seat bracket that clicks into this groove. When you fold the backrest forward and down for easy mount and dismount make sure the Velcro tab is folded forward and down so the adjustment bolt rests on it and not directly on the seat. With the backrest in the upright riding position you can infinitely adjust the forward and back position by turning the adjustment bolt.

The backrest hinge should be adjusted so it tilts freely to the angle of your back but firm enough to stay in the set position.

Questions or problems call us on 1-800-818 6868

Email des@ultimateseats.ca

Web site www.ultimateseats.ca